



INSTRUCTION MANUAL FOR THE SAFE USE AND MAINTENANCE OF HYDRAULIC JACK B10044

LARZEP SA
Avda. Urtiaga, 6. 48269 MALLABIA (Vizcaya). SPAIN
P O Box 27. 20600 Eibar (Guipúzcoa). SPAIN
Tel: (+34) 943 171 200 Fax: (+34) 943 174 166
Email: comercial@larzep.com www.larzep.com

LARZEP HYDRAULIC (UK) LTD
Unit 1A Park Road Industrial Estate
CONSETT CO. DURHAM DH8 5PY ENGLAND
Tel: (+44) 1207 582 266 Fax: (+44) 1207 583 366
Email: enquire@larzep.co.uk www.larzep.co.uk

LARZEP AUSTRALIA PTY LTD
Unit 19, 35-41 Westpool Drive HALLAM VIC 3803 AUSTRALIA
Tel: (+61) 3 9796 3744 Fax: (+61) 3 9796 5964
Email: sales@larzep.com.au www.larzep.com.au

TECHNICAL SAFETY WARNINGS FOR THE MAINTENANCE AND USE OF THE HYDRAULIC TROLLEY JACK.

This manual contains all the necessary instructions for the correct and safe use of the product and should be complied with in all respects. The instructions are intended to enable the User to be in possession of knowledge which will ensure safe installation and use of the equipment, without any risk as well as safety during the service and maintenance of the equipment. These instructions are essential for the correct and safe use of the equipment, and must always accompany the equipment, even if the equipment is resold by the original owner or any subsequent owner. The owner and/or operator of the jack shall understand the product operating instructions and warnings before operating the equipment. If the operator is not fluent in English, the product operating instructions and warnings shall be read and discussed with him/her, in the operator's language, making sure that he/she understands the contents. Incorrect operation of the equipment or its accessories and the non-observance of the warnings of possible damage may cause serious injuries to people or damage to equipment/vehicles worked upon. The complete system is supplied for operating only after all protection details in these instructions are complied with. The company LARZEP and its officially appointed agents shall not be liable for any direct and/or consequential injury or damage which may occur as a result of misuse in any manner or form or of lifting loads in excess of the designed capacity resulting in failure of the equipment. The following sections give him/her necessary guidelines for the efficient and safe operation of the equipment. Section 9 of this manual covers the broad subject of maintenance and efficient operation as well as trouble shooting and the necessity for repairs to be carried out by specialised personnel.

THE COMPANY LARZEP AND ITS OFFICIALLY APPOINTED AGENTS ARE THE ONLY AUTHORISED PROVIDERS OF TECHNICAL SUPPORT AND MAINTENANCE OF THE EQUIPMENT INCLUDED IN ITS WARRANTY.

INDEX OF CONTENTS:

SECTION 1 = Description of the jack and general principles of contents.

SECTION 2 = Tables of significant technical data of the jack.

SECTION 3 = Design, characteristics and use of the jack.

SECTION 4 = Movement, transport and packing.

SECTION 5 = Assembling and disassembling of the jack.

SECTION 6 = Preparation of the jack for putting into service.

SECTION 7 = Putting into service and use of the jack.

SECTION 8 = Cleaning of the jack.

SECTION 9 = Maintenance and repair.

SECTION 10 = General and specific safety measures.

SECTION 11 = Part numbers.

SECTION 12 = Decommissioning, dismantling, recycling.

S E C T I O N 1

DESCRIPTION OF THE JACK AND GENERAL PRINCIPLES OF CONTENTS

Hydraulic trolley jack for lifting stated capacity loads. Complete with hydraulic oil, and removable handle for quick and easy transport. Equipped with automatic end stroke valve and overload safety valve. The jack and all its components have been built in accordance with the following safety regulations:

REGULATION	DESCRIPTION
UNI EN 292-1	= Safety of the machinery: fundamental concepts, general principles of design. Part. 1: Terminology, basic methodology.
UNI EN 292-2	= Safety of the machinery: fundamental concepts, general principles of design. Part. 2: Theoretical specification and principles.
UNI EN 294	= Safety of the machinery: safety distance to avoid reaching dangerous area with the upper limbs.
EN 349	= Safety of the machinery: minimum room to avoid crushing of any part of the human body.
EN 414	= Safety of the machinery: rules for the design and the introduction of the safety rules.
EN 418	= Safety of the machinery: emergency stopping device, functional aspects, and principles of design.
EN 953	= Safety of the machinery: the necessary requirements for the design and the construction of Protection (Fixed, mobile).
EN 983	= Safety of the machinery: safety requirements for system/components with fluid and pneumatic energy
Pr EN 1050	= Evaluation of the risk.

SECTION 2

TECHNICAL CHARACTERISTICS OF THE HYDRAULIC TROLLEY JACK

TYPE	CAPACITY ON THE PLATE	A	B	C	D	E	WEIGHT KG.
B15042	15	180	600	1910	400	270	155

SUMMARY: A = MIN. HEIGHT - B= MAX HEIGHT - C=MAX LENGTH - D= MAX WIDTH - E= MIN. HEIGHT OF FRAME

SECTION 3

DESIGN CHARACTERISTICS AND USE OF THE JACK.

Hydraulic trolley jack for lifting of stated capacity loads. Solid and strong structure fitted with four wheels: two fixed and two swivel. Guarantees stability in all operating positions. While being designed mainly for lifting of loads such as cars, and small vans and trucks, the jack can be employed for lifting any other kind of load within the rated capacity of the jack.

WARNING: In case of lifting hazardous goods (explosive materials, chemical-toxic substances etc.) it is necessary to take proper precautionary measures according to the kind of goods lifted.

IMPORTANT: The jack is designed for the lifting of loads and not for continued support, for which you have to use the correct supporting stands.

The hydraulic trolley jack is designed for use in normal conditions of temperature and humidity. In situations with exceptional temperatures, above or below 50° degrees centigrade from zero, the jack may show some failure due to the altered viscosity of the hydraulic oil.

SECTION 4

MOVEMENT, TRANSPORT AND PACKING.

The jack is shipped together with all its accessories (plate and handle) and packed in plastic bubble wrap. The packing material can be recycled. The handle is removable.

SECTION 5

ASSEMBLING AND DISASSEMBLING OF THE JACK.

The hydraulic trolley jack does not need any assembly or additional hydraulic oil, as it is ready for use. Before using it, it is necessary to adhere to the instructions and warnings specified in the following section (no.6).

SECTION 6

PREPARATION OF THE JACK FOR PUTTING IN TO SERVICE.

Before operating the hydraulic trolley jack, it is necessary to check that it is complete, and does not show any evidence of damage. It is particularly necessary to check that the handle fits correctly in its correct position. It is also necessary to check that the handle is straight and that no other components and parts of the jack have been damaged.

SECTION 7

PUTTING INTO SERVICE AND USE OF THE JACK

- 1) Remove the jack from its packaging. The packing material can be recycled. Check also that no components have been damaged.
- 2) Insert the handle in its correct position, and fix with screws.
- 3) Test the jack by lifting first without a load, then with the plate in the middle of the load.

IMPORTANT: This easy operation must be done every time in order to ensure a safe and correct lifting position.

- 4) Use the central pedal for a quick approach of the lifting arm to the load, and put the plate in a secure position (in the middle), then start pumping with the handle.

WARNING: NEVER use the foot pedal for lifting. The pedal is only to make a quick approach and NOT for lifting.

- 5) To release the jack, push the side pedal.

IMPORTANT: DO NOT OVERLOAD THE JACK. OVERLOAD CAN CAUSE DAMAGE OR FAILURE TO THE JACK.

SECTION 8

CLEANING OF THE JACK

The jack must be kept clean and lubricated. Once a month clean it with proper unoxidized detergent.

WARNING: Never use water to clean the jack. Most of its components are made from steel and can oxidize.

SECTION 9

MAINTENANCE AND REPAIR

- 1) The jack must be kept clean and lubricated, in order to be ready for use.
- 2) Check the oil level monthly.
- 3) Grease the pin every 4 months.

REPAIR OF THE HYDRAULIC TROLLEY JACK.

Owners and operators of the hydraulic trolley jack must be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the trolley jack must be made by supplier's authorized specialist and that dangerous, defective or damaged parts must be replaced with original spare parts supplied by our company. (See spare parts list).

PROBLEM	POSSIBLE CAUSE	REMEDY
1) The jack does not lift the load	1) There's no oil in the pump 2) Release valve is damaged 3) Worn Seal 4) Release pedal damaged	1) Add oil in the pump 2) Change the release valve 3) Replace the Seal 4) Change the release pedal
2) The jack does not reach the max. height	1) Oil level is low or there is no oil in the pump	1) Add oil in the pump
3) The jack does not sustain the load	1) Release valve damage 2) Worn Seal 3) Release pedal damaged	1) Change the release valve 2) Replace the Seal 3) Change the release pedal
4) Erratic operation	1) Dirty oil	1) Change the oil
5) Oil leaking	1) Worn Seal	1) Replace the Seal

USE HYDRAULIC OIL TO ISO HM 32 SPECIFICATION. NEVER USE BRAKE FLUID.

WARNING: DO NOT OVERFILL AS A SURPLUS OF OIL WILL DAMAGE COMPONENTS.

SECTION 10

GENERAL AND SPECIFIC SAFETY RULES.

- 1) A visual inspection must be made before each use of the trolley jack, checking for leaks, damage, missing or worn parts.
- 2) Before lifting any loads, be sure that the load is positioned in the middle of the plate.
- 3) The jack is to be used only to lift loads and NOT to support them. In this case use proper supporting stands.
- 4) The jack is designed for use only on strong level surfaces capable of sustaining the weight of the load.

WARNING: The use on soft or uneven flooring can result in trolley jack instability or possible loss of load.

- 5) The safety valve is calibrated and sealed by our company. It is absolutely forbidden to tamper with this valve or change its calibration.
- 6) The operating conditions must guarantee safety of the operator who must not work under or very close to the vehicle before supporting stands are in place.

WARNING: DO NOT EVER LIFT LOADS GREATER THAN THE NOMINAL CAPACITY OF THE JACK, AS THIS MAY CAUSE ITS FAILURE OR LOSS OF LOAD.

IMPORTANT: THE NON OBSERVANCE OF THESE RULES MAY CAUSE DAMAGE TO THE JACK AND LOSS OF THE LOAD WITH CONSEQUENTIAL INJURIES TO PEOPLE AND DAMAGE TO OBJECTS.

SECTION 11**PART NUMBERS AND NAMES OF THE JACK PARTS**

PART NMR.	NAME	PART NMR.	NAME	PART NMR.	NAME	PART NMR.	NAME
1	Plate	12/28	Nut	24	Fixed wheel	40	Spring
2	Pin	13/26	Washer	25	Circlip	43	Nut
3	Pin	14/45	Washer	29	Handle	44	Swivel wheel
4	Plate work place	15/42	Frame (left and right)	33	Knob	45	Washer
5	Pump cover	16	Axle front wheel	34	Pedal	50	Handle socket
6/22	Springs	17	Nut	35	Handle pin	100	Lifting arm pin
7	Lifting Arm	18	Screw	36	Pin	101	Spring attachment pin
8/10	Lifting arm connection	19	Washer	37	Pin	102	Handle stop
9	Washer	20/41	Nut	38	Piston connection	103	Spring attachment pin
11/27	Screws	P-23	Hydraulic unit complete	39	Washer		

SECTION 11**PART NUMBERS AND NAMES OF PUMP PARTS**

PART NMR.	NAME	PART NMR.	NAME	PART NMR.	NAME	PART NMR.	NAME
60	Cylinder	68	Seal work place	75	Overload safety valve	83	Base
61	Oil tank	69	O-ring	76	Seal for safety valve	84	O-ring
62	O-ring	70	Piston	77	Pumping element	85	Steel ball
64	Cylinder head	71	Release valve connection	78	Seal	86	Pawl
65	Nut	72	O-ring	79/80	O-ring	89	Release valve
66	Washer	73	O-ring work place	81	Cylinder pumping element	91	Oil plug
67	Main piston seal	74	Steel ball	82	Pawl	92	Seal for oil plug

SECTION 12**DECOMMISSIONING, DISMANTLING, RECYCLING**

All damaged, over used or worn jacks should be removed from service.

Concerning the destruction of the jack, please note the following instructions:

- 1) Drain the oil from the pump and recycle it according to laws in force.
- 2) All the other components are made from steel, and can be recycled.

